


- Disconnect plug (arrow) of oxygen sensor.


Note: On models 107 and 116.033, the plug must first be pushed out of the holding clip towards the top.

- Loosen holding clamps of oxygen sensor cable (if applicable).

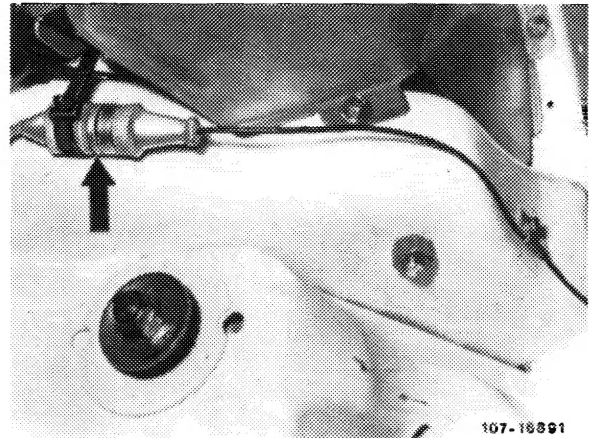

Model 116.024,123

- Unscrew oxygen sensor.
- Apply high temperature grease, MB Part No. 000 989 88 51, to thread of oxygen sensor.

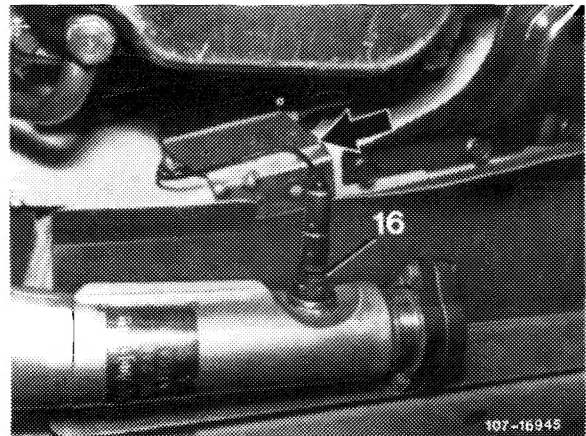

Model 107, 116.033

- Install oxygen sensor and tighten to a torque of 50 – 60 Nm (5–6 kpm).
- Disconnect plug on mileage counter under instrument cluster.

